



STX31 7

MDC: 00242-LX470-07

 LEXUS



2007 Lexus Personalized Settings
*2006 LX 470 shown

LX 470

SYSTEM	QUICK FEATURE REFERENCE	CUSTOMIZED SETTING
Door Lock Systems	1. Unlocking the driver's door/ all passenger doors	By pressing the remote key door unlock button, the following functions can be programmed: ○ 1. Pressing the unlock button one time will unlock all doors. (Rear included) ○ 2. Pressing the unlock button one time unlocks the driver's door, and two times unlocks all doors. (Standard)
	2. Flashing of signal lights	Using the remote key, the following functions can be programmed: ○ 1. Press the LOCK/UNLOCK button on the remote key and the lights will not flash. ○ 2. Press the LOCK button and the lights will flash once, press the UNLOCK button and the lights will flash twice. (Standard)
	3. Unlocking of doors when placing vehicle into park	While the engine is running and the vehicle is placed into park, the vehicle can be programmed as follows: ○ 1. When placing the vehicle into park, all of the doors will remain LOCKED. ○ 2. When placing vehicle into park, ALL the doors will automatically UNLOCK. (Standard)
	4. Auto locking of doors at 13 mph	When the vehicle reaches 13 mph, the vehicle can be programmed as follows: ○ 1. The doors will not lock. (Standard) ○ 2. All of the doors will automatically lock.
	5. Unlocking of doors when driver's door is opened within 10 seconds	When the vehicle is turned off and the drivers' door is opened within 10 seconds, the following options can be programmed: ○ 1. All of the doors will remain locked when opening the driver's door. (Standard) ○ 2. All of the remaining doors will automatically unlock.
	6. Locking of doors when shifting from park into another range	While the brake pedal is being pressed and the vehicle is taken out of park and placed into another range, the doors can be programmed as follows: ○ 1. Remain unchanged. ○ 2. Automatically lock. (Standard)
Power Window	7. Use of remote key to open all windows	Pressing the UNLOCK button on the remote key for 2.5 seconds, the vehicle can be programmed as follows: ○ 1. The windows will not roll down. ○ 2. All the windows will roll down. (Standard) *Note: See slide roof for additional options.
Moon Roof	8. Use of remote key to open/ tilt moon roof	By pressing the UNLOCK button on the remote key for 2.5 seconds, the following options can be programmed: ○ 1. The moon roof will not open. ○ 2. The moon roof will open. (Standard) *Note: Option #7 must be on.
	9. Use of remote key to open/ tilt moon roof	When option #7 and #8 are active, the moon roof can be programmed for the following: ○ 1. Slide (Standard) ○ 2. Tilt
Lighting Systems	10. Illumination of cabin light	After closing the door, the interior lights can be adjusted to stay on for the following: ○ 1. 7.5 seconds ○ 2. 15 seconds (Standard) ○ 3. 30 seconds
	11. Illumination of the interior light	When the ignition switch is turned from ACC to LOCK, the interior cabin light can be programmed for the following: ○ 1. Not illuminate. ○ 2. To illuminate. (Standard) * Note: The interior cabin light must be placed in the door mode.
	12. Delay for headlights to turn off	After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position, the lights can be programmed for the following: ○ 1. Turn off in 30 seconds. (Standard) ○ 2. Turn off in 60 seconds. ○ 3. Turn off in 90 seconds. ○ 4. Turn off immediately, when the vehicle is turned off and the driver door is opened.
	13. Sensitivity of the automatic headlights	While driving the vehicle and the headlight switch is placed in the "AUTO" mode, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. Circle setting selection: Very Light ① ② (Standard) Normal ③ ④ Very Dark ⑤ Normal = 3 (Standard)
	14. Auto tilt away of the steering wheel	When the vehicle is placed in park, the ignition turned off, and the key is removed from the ignition, the steering wheel can be set to the following: ○ 1. Automatically move up and away from the driver position setting. (Standard) ○ 2. Remain in the current position, as set by the driver.