



Technical Service Information Bulletin

November 23, 2001

Title:

CUSTOMIZE FUNCTION - DIAGNOSTIC PROGRAM CARD VERSION 8.1

Models:

'98 – '02 LX 470

SS010-01

SPECIAL SERVICE TOOLS

Introduction The Customize feature for the Lexus Diagnostic Tester allows Lexus Dealers to customize many of the electrical functions on 1998 – 2002 model year LX 470 vehicles to match individual customer desires. This bulletin will provide you with information for customization on this model only. Individual bulletins will be released for each 2002 Lexus model.

NOTE:

This function requires version 8.1a, or later, software. Diagnostic Tester software can be updated using TIS. Click the link on the TIS home page to download.

**Applicable
Vehicles**

- 1998 – 2002 model year LX 470 vehicles.

**Required Tools
& Material**

TOOLS & MATERIAL	PART NUMBER	QUANTITY
Lexus Diagnostic Tester Kit	01001270	1
12 Megabyte Diagnostic Tester Program Card with version 8.1a Software (or later)	01002593-005	1

NOTE:

Additional Diagnostic Tester Kits or Program Cards may be ordered by calling OTC at 1-800-933-8335.

**Service
Procedure**

When modifying customize functions, a detailed description, including the "Item Selected," the old setting and the new setting, must be entered into the Lexus National Service History as a vehicle note.

EXAMPLE:

If changing the WIRELESS BUZZ VOLUME function from MID2 to MAX, enter the following information into the National Service History Vehicle Notes:

Customize Service – WIRELESS BUZZ VOLUME/ Old – MID2 / New – MAX

NOTE:

Having these records in the National Service History is very important. If a customer decides that they preferred a previous setting, they may not be able to provide the Dealer with a correct description of the function or its previous setting. The National Service History can be used in conjunction with the customer's explanation to verify that the correct function is being reset.

**Warranty
Information**


OP CODE	DESCRIPTION	TIME	OPN	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–



Lexus Supports ASE Certification

Operation Procedure The following steps show the user how to access the “FUNCTION SELECT” screen for customizing.

1. Insert the key into the ignition key cylinder and turn to the ON position.
2. Connect the LEXUS Diagnostic Tester to DLC3 and press the “ON” key.
3. Using the Diagnostic Tester, follow the screen flow below to access the customize function select menu.

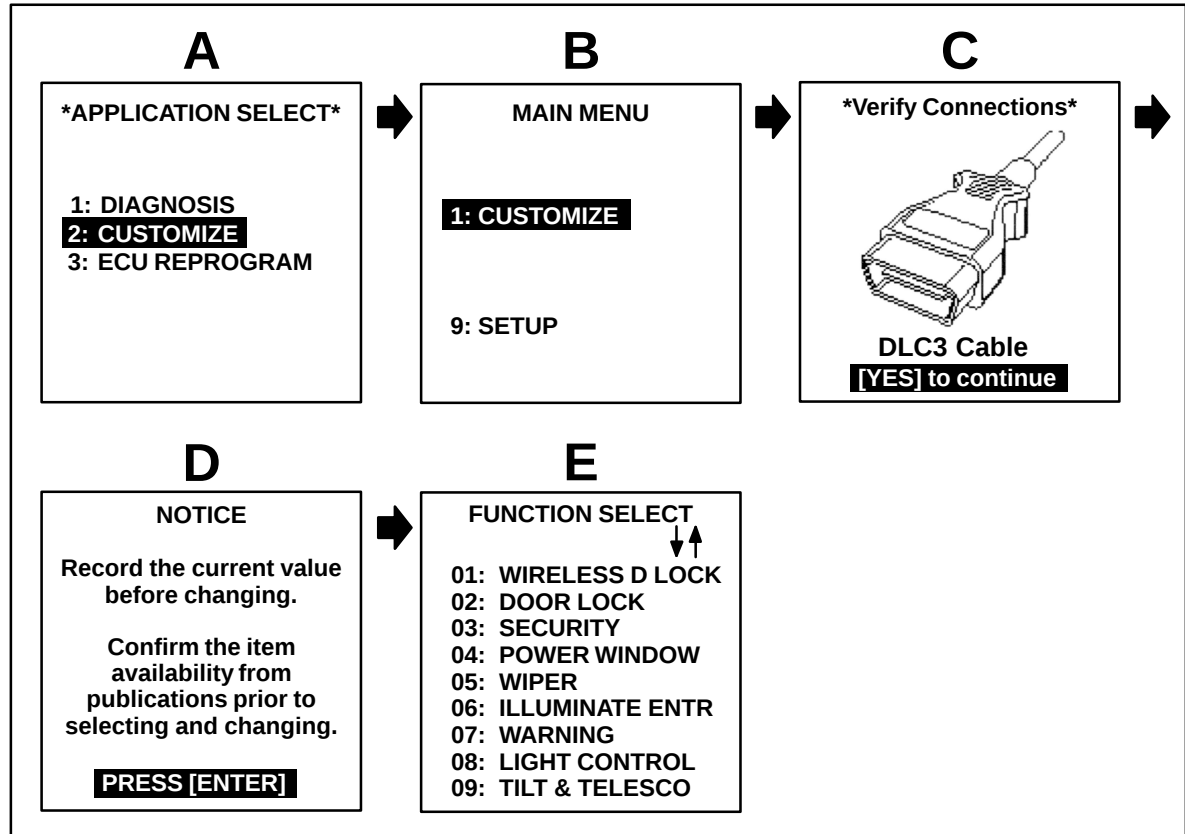

NOTE:

Before changing any customize item, be sure to record the current value.

Customize Items

FUNCTION SELECT	ITEM SELECT	DEFAULT	DESCRIPTION	OPTIONS
TILT & TELESCO (Tilt & Telescope)	AUTO TILT AWAY (Auto Away/Return Function)	ON	ON: The steering column will automatically move away from the driving position setting when the ignition switch is turned OFF and the key is removed. OFF: The steering column will NOT automatically move away from the driving position setting when the ignition switch is turned OFF and the key is removed.	ON/OFF

NOTE: Please record all changes in the Lexus National Service History Database, as per Service Procedure on page 1.